

1

Switch on the processor




Does the LED flash 🌟 ... 🌟 Then 🌟🌟🌟

NO X

Change Battery

YES ✓

2

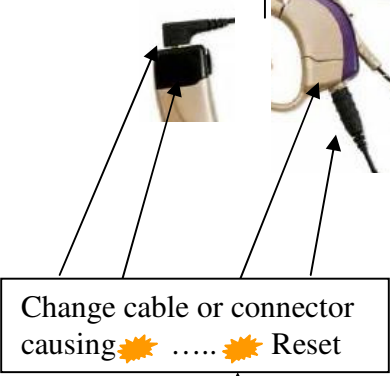

Change cable or connector causing 🌟 🌟 Reset

Wiggle cable and connectors.
 Does the LED flash 🌟..... 🌟 Then 🌟🌟🌟

YES ✓

NO X

3

Put coil on head 🌟 ➡ 👤

Does LED flash to sound:
 BAA-BAA-BAA = 🌟🌟🌟

NO X

Change coil

YES ✓

Processor is functioning correctly ✓

