


- 1. Remove battery rack from the processor.
- 2. Insert the Freedom microlink into the processor.
- 3. Turn ON your processor.

Testing the radio aid with the listening headphones:

- 4. Plug monitor earphones into socket under flap on microlink.
- 5. Insert the Freedom microlink into the processor.
- 6. Turn ON your processor.
- 7. The input from both the processor microphone and the FM system can be heard through the earphones (only active for 90sec).
- 8. Listen to the earphones to check sound quality.

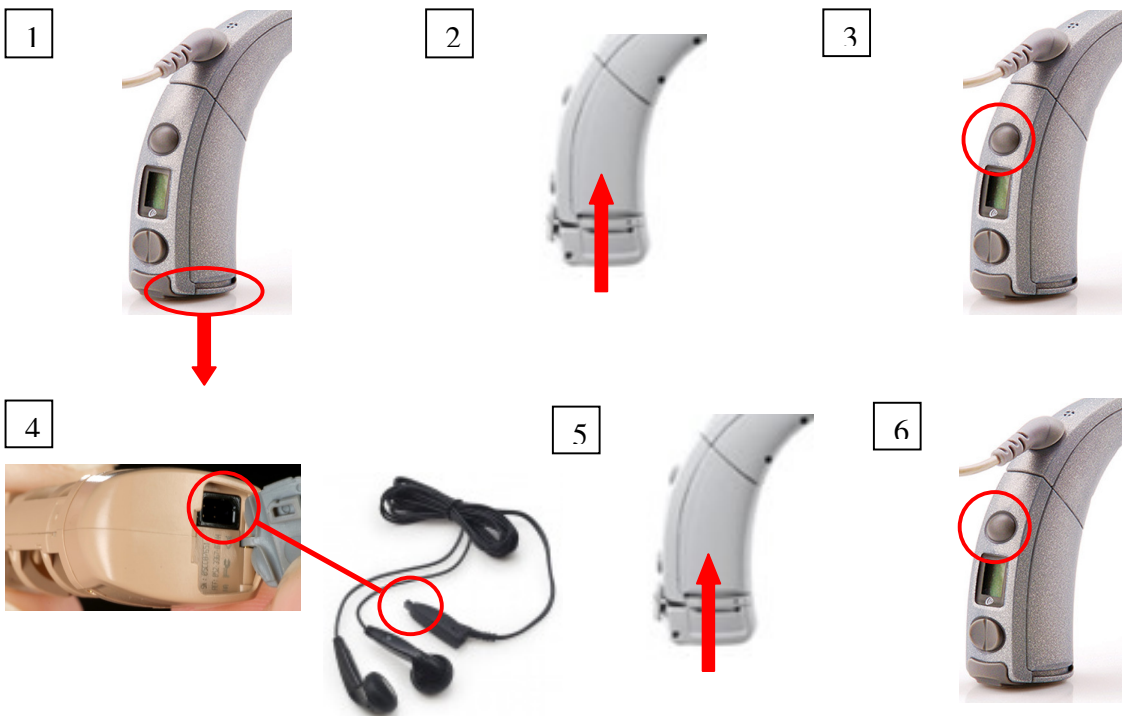

Once the student has the radio aid in place check that they can hear clearly through the radio aid.